


Wonder Wheeler® Beach Conversion Kit Instruction Sheet




- 1) Remove assembled kit from carton and follow installation instructions below.
- 2) Turn Wonder Wheeler® upside down so that it's resting on handle and basket frame tubes.
- 3) Remove rear wheels and axle from Wonder Wheeler® cart
- 4) Take the Wheelleez® axle kit and remove wheel retention pins from both ends of axle. Remove connector pins from black axle frame connectors. (axle kit shown below)

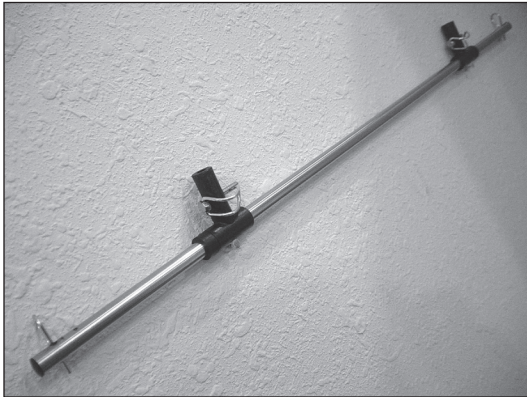

- 5) Insert black frame connectors (already mounted onto axle) into Wonder Wheeler® rear frame tubes as shown below. (frame connectors must be completely inserted)




- 6) Install connector pins

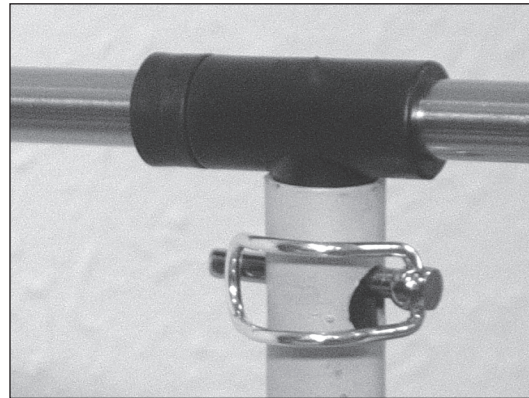


- 7) Mount wheels onto axle

- 8) Install wheel retention pins

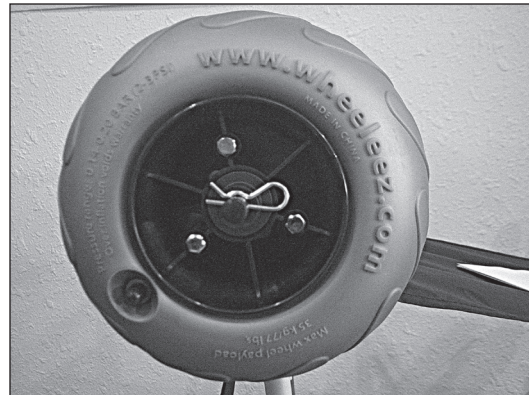

Parts

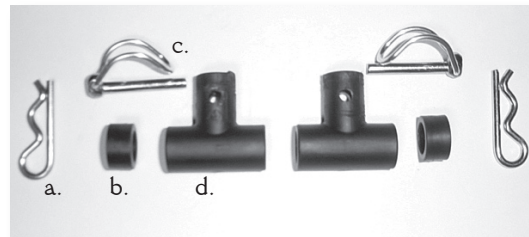

- a. Wheel retention pins
- b. Spacer washers
- c. Connector pins
- d. Axle / black frame connectors

Your Wonder Wheeler® can now roll effortlessly over sand.

